

NeoGate TB400 Application Firmware Upgrade

(Please check the Hardware Version before upgrade)

1.1 Upgrade through TFTP.....	2
1.2 Upgrade through HTTP.....	3

1.1 Upgrade through TFTP

Step 1: Download the upgrade file. (e.g. 6.11.0.05.bin)

Download link: <http://www.yeostar.com/download/NeoGate-TB400/>

Step 2: Create tftp Server (For example, tftpd on Windows)

1) Install tftpd32 software on computer

Download link: http://tftpd32.jounin.net/tftpd32_download.html

2) Configure tftpd32

On option 'Current Directory', click 'Browse' button, choose the firmware file of NeoGate TB400 upgraded patch, such as C:\Image\6.11.0.05.bin

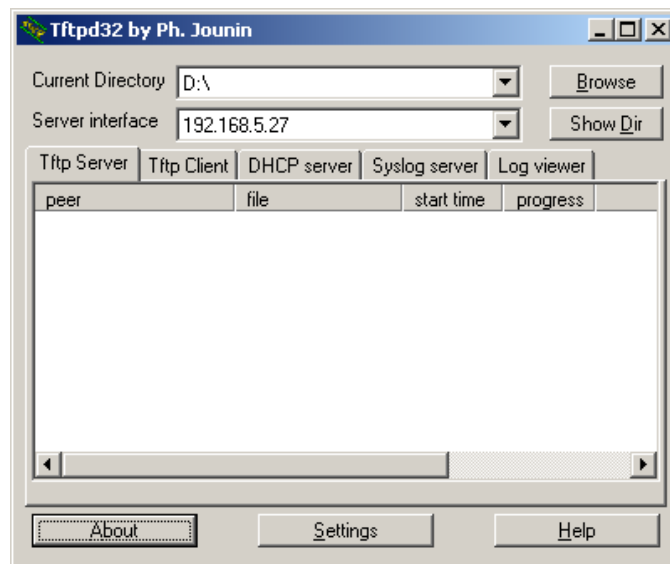


Figure 1-1


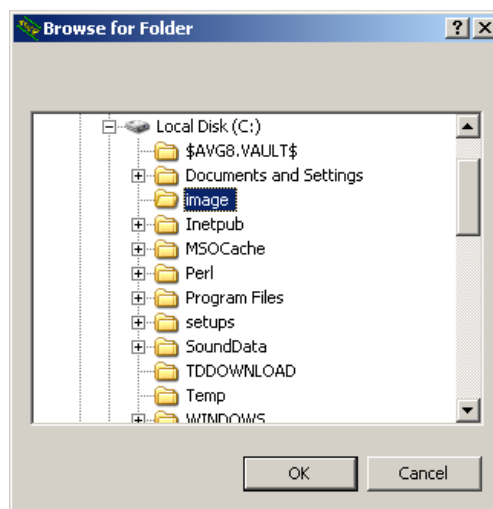


Figure 1-2

Step 3: On NeoGate TB400 configuration page, select **System Settings**→

Firmware update→**Download Image From A** , choose '**TFTP Server**':

- 1) TFTP Server: Fill in IP address of tftpd32 server, such as 192.168.5.27
- 2) File Name: Enter the name of firmware update, such as 6.11.0.05.bin
- 3) Click 'Start' to upgrade

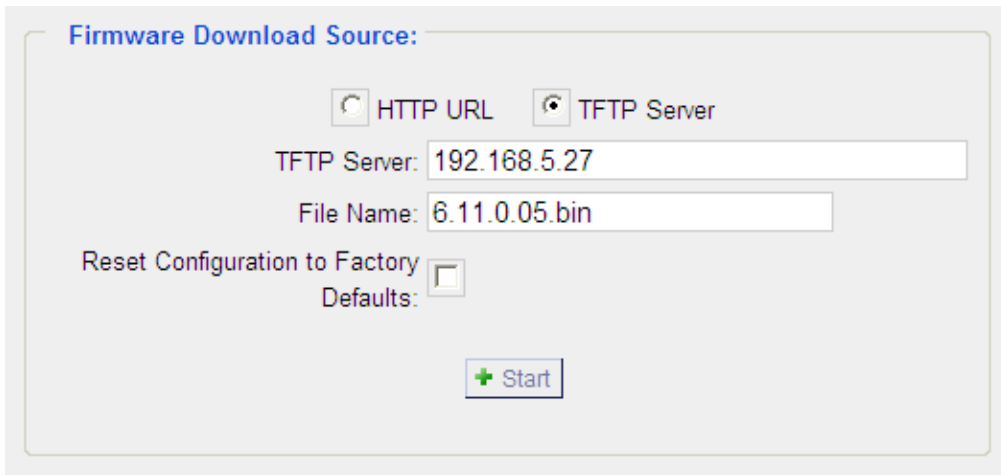

The screenshot shows a web interface titled "Firmware Download Source:". It features two radio buttons: "HTTP URL" (unselected) and "TFTP Server" (selected). Below the radio buttons, there are two text input fields: "TFTP Server:" containing the IP address "192.168.5.27" and "File Name:" containing "6.11.0.05.bin". There is also a checkbox labeled "Reset Configuration to Factory Defaults:" which is currently unchecked. At the bottom of the form is a green button with a plus sign and the text "Start".

Figure 1-3

1.2 Upgrade through HTTP

On NeoGate TB400 configuration page, select **System Settings** → **Firmware update** →**Download Image From A**, choose '**HTTP Server**':

- 1) HTTP URL: Enter the update image file download link.

Example:

<http://www.yeostar.com/download/NeoGate-TB400/6.11.0.05.bin>

- 2) Click 'Start' to upgrade



The screenshot shows a web interface titled "Firmware Download Source:". It features two radio buttons: "HTTP URL" (selected) and "TFTP Server" (unselected). Below the radio buttons, there is a text input field labeled "HTTP URL:" containing the link "http://www.yeostar.com/download/NeoGate-TB400/6.11.0.05.bin". There is also a checkbox labeled "Reset Configuration to Factory Defaults:" which is currently unchecked. At the bottom of the form is a green button with a plus sign and the text "Start".

Figure 1-4

Note:

1. If enabled 'Reset configuration to Factory Defaults', NeoGate TB400 will restore to factory default settings.
2. If you're failed to upgrade through HTTP, please try again by TFTP way.
3. If you're again failed through TFTP upgrade way, please turn off your computer's firewall, and then retransfer.

If the update is successful, you will see the version info on system information.

[End]